

Installation Guide

For ANL Fuse
ANLHOLD, ANLHOLDC



DOCUMENT ID: 6596	IM
REVISION: 6	
DATE: 2021	
LANGUAGE: EN	

Installation Guide

For ANL Fuse
ANLHOLD, ANLHOLDC



DOCUMENT ID: 6596	IM
REVISION: 6	
DATE: 2021	
LANGUAGE: EN	

Installation Guide

For ANL Fuse
ANLHOLD, ANLHOLDC



DOCUMENT ID: 6596	IM
REVISION: 6	
DATE: 2025	
LANGUAGE: EN	

Installation Guide


For ANL Fuse
ANLHOLD, ANLHOLDC



DOCUMENT ID: 6596	IM
REVISION: 6	
DATE: 2021	
LANGUAGE: EN	


Fitting the fuse into the fuse holder

To avoid heating and voltage drop, it is important that the fuse/holder is assembled exactly as shown here with the fuse between the contact plates.

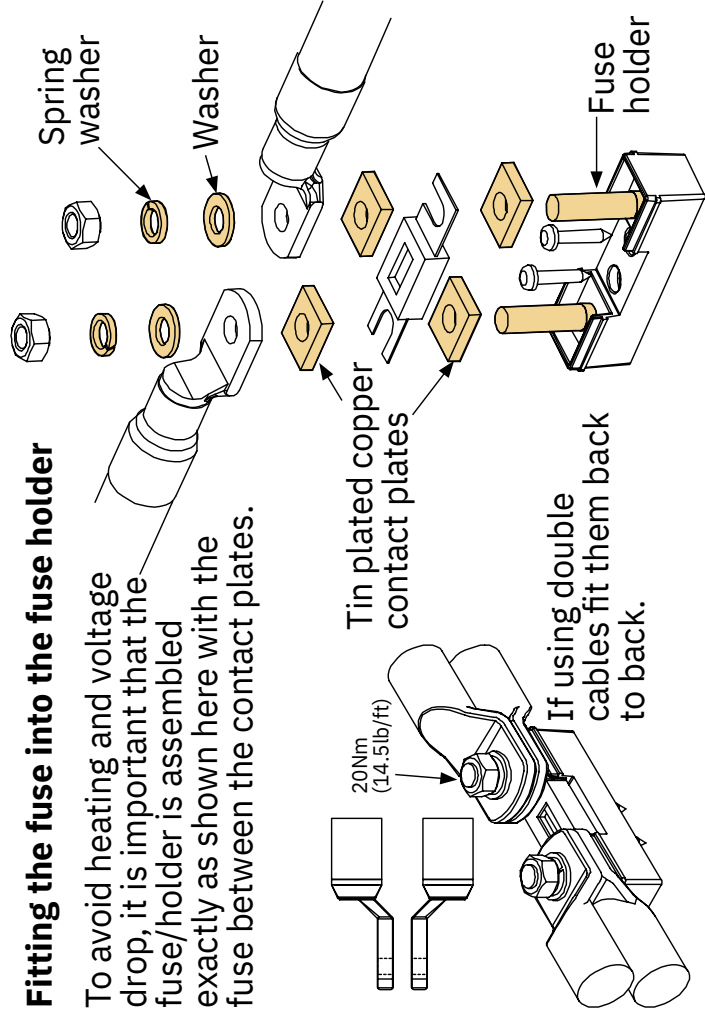


Fitting the fuse into the fuse holder

To avoid heating and voltage drop, it is important that the fuse/holder is assembled exactly as shown here with the fuse between the contact plates.

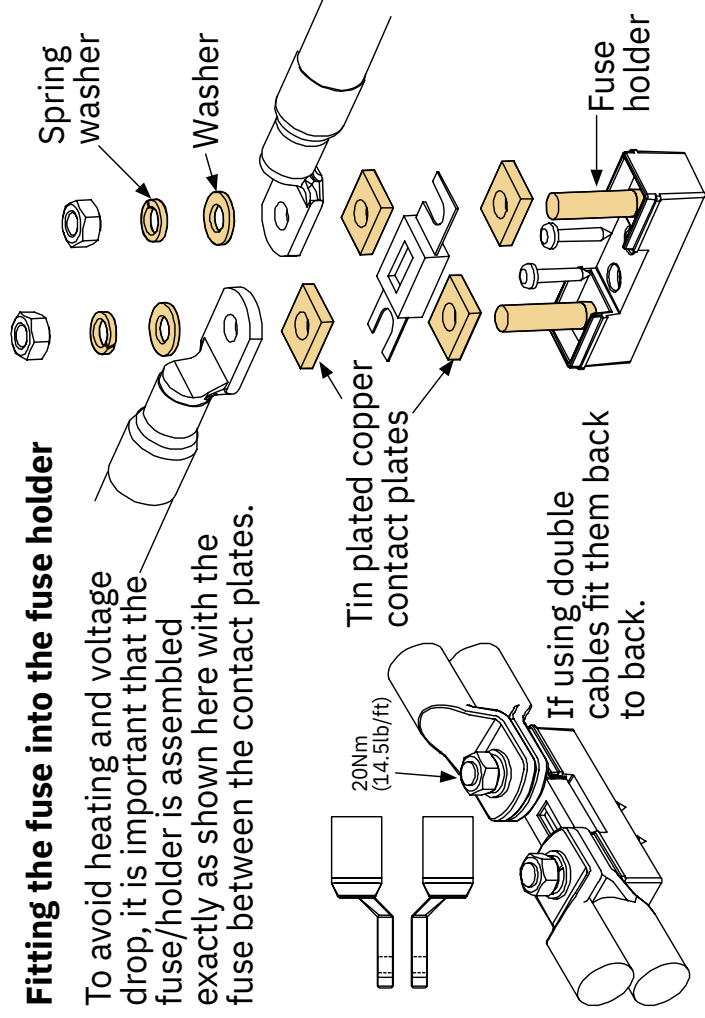

Fitting the fuse into the fuse holder

To avoid heating and voltage drop, it is important that the fuse/holder is assembled exactly as shown here with the fuse between the contact plates.

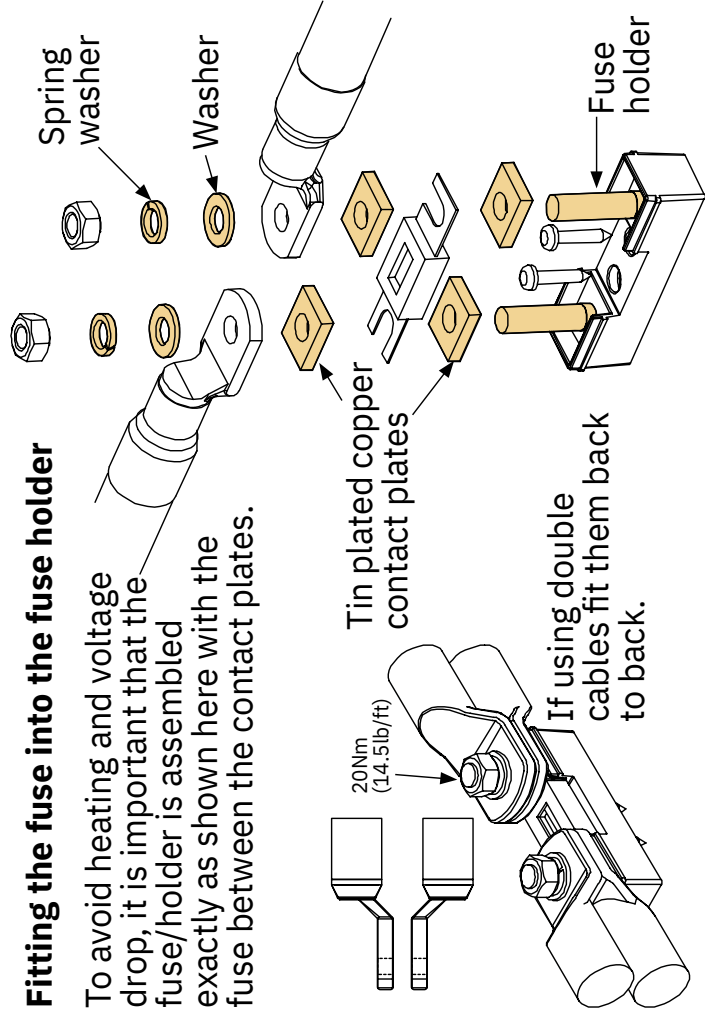

Fitting the fuse into the fuse holder

To avoid heating and voltage drop, it is important that the fuse/holder is assembled exactly as shown here with the fuse between the contact plates.

